

Stairladder

Usage and Maintenance instructions

Ladder usage.


Stand behind the hatch when lowering your ladder from the ceiling.
Stand at the side of the ladder with your hand on the edge of the lid when unfolding the ladder.

Always face the ladder while climbing up or down

Do not use the ladder arm as a hold while climbing the ladder

Use the ladder hand rail to increase your stability wherever possible

Use the Hoop rail for stability when moving from your ladder into your roof space

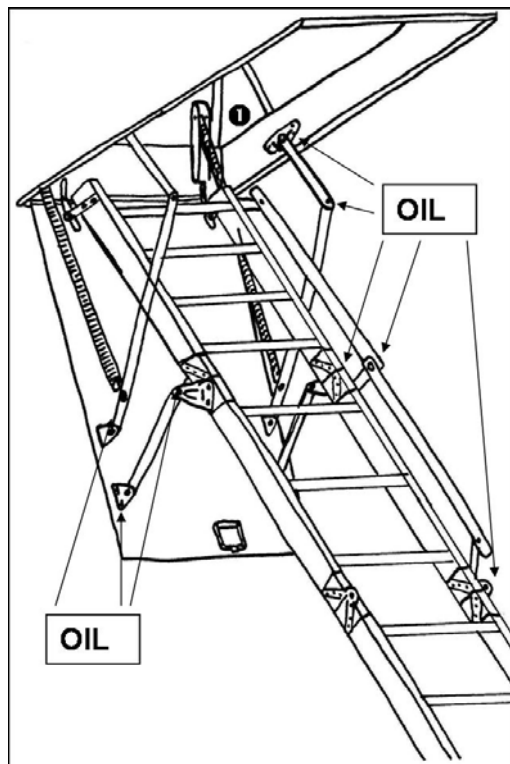

Maintenance

Check all nuts bolts and fastenings for tightness every 50 operations.

Your installer will have correctly adjusted your ladder, however,

- The allen screws on the arms can be used to adjust lid and ladder opening angle. Allan key normally stored at (1)
- Spring tension is adjustable by moving the springs up or down on the brackets at the rear of your ladder

Important:

Do not allow the lid of your ladder to slam as this may cause damage and void your warranty

Lubrication

Apply light machine oil (sewing machine oil) to all moving parts as shown in the diagram. Do not use kerosene based oil sprays (such as WD40)